


FI Asennusohje  
 S Installation instruktioner  
 N Installationsinstruktioner  
 DK Installationsinstruktus  
 NL Installatievoorschrift  
 D Montageanweisung  
 F Instructions d'installation  
 ES Instrucciones de montaje  
 I Istruzioni di montaggio

## ML6421A,B/ML7421A,B


### Electric Linear Valve Actuators

#### INSTALLATION INSTRUCTIONS

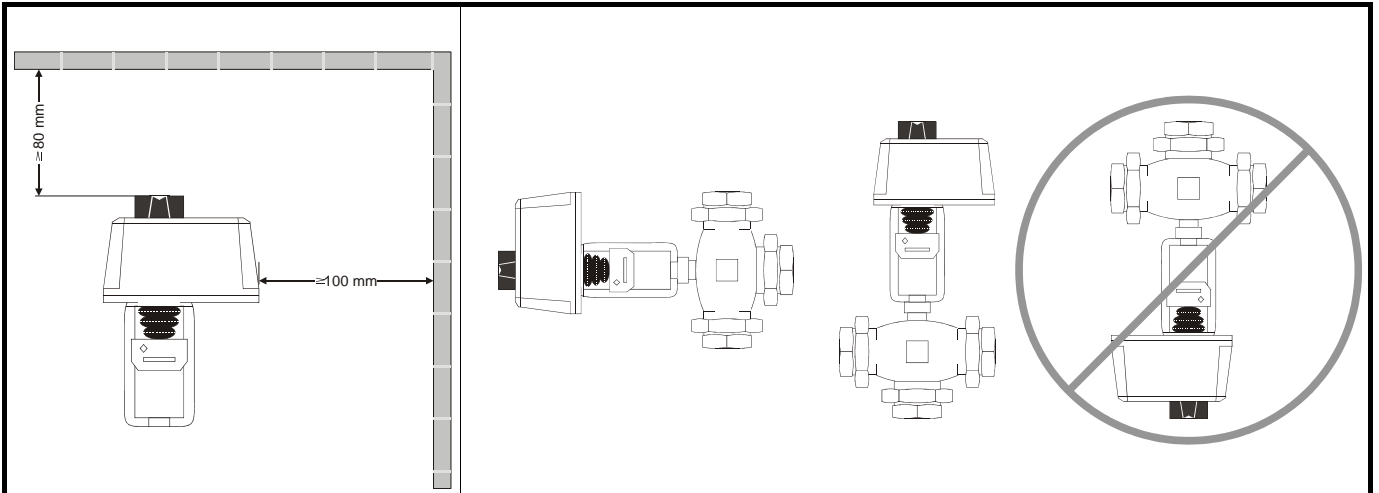


#### A1-A7: Mounting


mounting  
 D Einbau  
 F montage  
 I montaggio  
 NL montage  
 DK montere  
 N montering  
 FIN asentaminen  
 S montera  
 E montaje

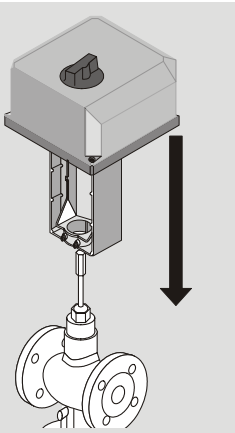


#### A1

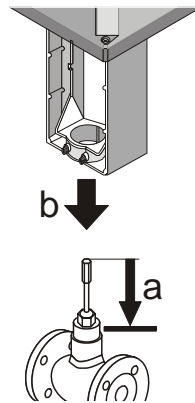


#### A2

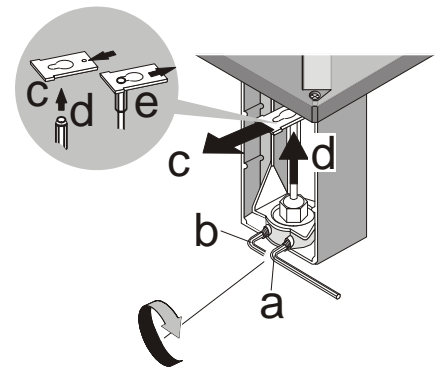


#### A3

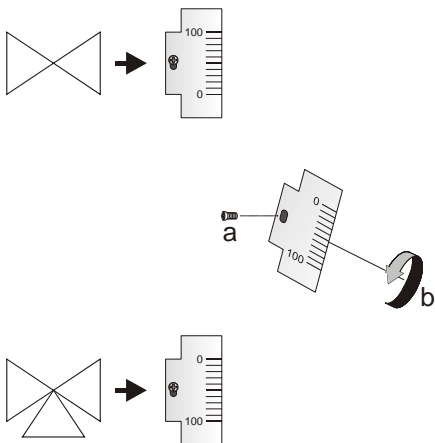

#### A4

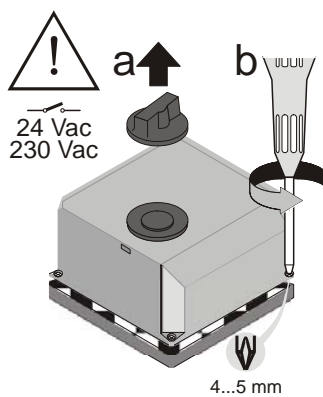

#### A5

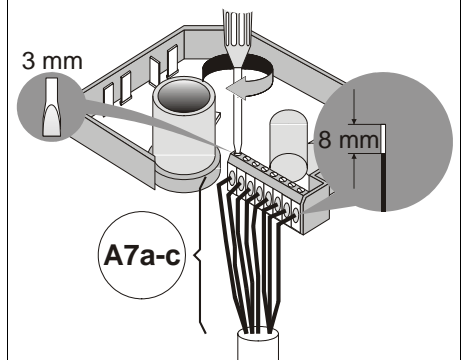

<p><b>A6: ML7421A,B</b></p>	<p><b>A7a: ML7421A,B (0/2...10 V)</b></p>	<p><b>A7b: ML6421A,B(24 V)</b></p>
<p><b>A7c: ML6421A,B (230 V)</b></p>	<p><b>A8</b></p>	<p><b>B: Manual</b></p>
<p><b>C: Dismounting</b></p> <p>dismounting  D Ausbau  F démontage  I smontaggio  NL demontage  DK afmontere  N demontere  FIN purkaminen  S nedmontera  E desmontaje</p>	<p><b>C1</b></p>	<p><b>C2</b></p> <p>A4 → A5 → A2 → A1</p>

## ROBINEX AG SA

**Armaturen Robinetterie Rubinetterie**

Bernstrasse 36, CH-4663 Aarburg/Oftringen

Telefon 062 787 70 00, Fax 062 787 70 01

info@robinex.ch, www.robinex.ch

**DIN EN ISO  
9001/14001**